

深圳市十度数码科技有限公司 Shenzhen SHIDU Digital Co.,Ltd.

Tel:+86 · 755 · 21635866 Hot line:4008 939 488

Add:深圳市宝安区新和新兴工业园2区A8栋十度科技园 Building A8, Zone 2, Xinhe Xinxing Industrial Park, Baoan District, Shenzhen, China 执行标准: GB8898-2011;GB17625.1-2012;GB/T13837.2012

x该明书所示内容均为用作操作指引所需,已经专业人员仔细核对,但仍有可能产生文字推测等问题,本公司不承担因此产生的法律后果,产品请以实物为i El法律允许范围内,本公司保留对内容的修改权利,恕不另行通知:十度及SHIDU 标识均为注册商标,受知识产权保护未经许可,不得擅自使用,违者必究

HOME HI-FI AUDIO USER MANUAL

本机内置A品动力电池,本厂予以承诺电池保用3年

SOUND OF CHANGE



十度原声

● 天籁之音

欢迎您使用SHIDU十度数码产品!

拥有,就会真切地感受到它的卓越性能和优良品质,让您时刻都能享受到生活的轻 松愉快。为了能让您更好的体验十度数码的精工品质,请您在使用本产品前,认真 阅读本说明书。如有不解之处,您可向本公司客服咨询。 本手册中的内容,除非适用法律要求,十度数码科技对本手册中的所有内容不提供 任何明示或暗示的保证。在法律允许的范围内, 十度数码科技在任何情况下, 都不 对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、继发性的损害进 行赔偿,也不对任何利润、数据、商誉或可预期的损失进行赔偿

若需将此产品手册中描述的产品出口、再出口或者进口,您应遵守适用的进出口管 制法律法规。

SHIDU十度数码产品将以高科技的品质和优良的服务进入您的工作和生活,您一旦

07.在易燃易爆区域,请关闭本产品,并遵守相关标示说明,以免引起爆炸或火灾。 易燃易爆区域包括但不限于:加油站、易燃或化工制品运输及存储设施、有爆炸

01.请勿将产品及配件靠近火源或任何过热的环境中

品浸入任何液体中,避免产品及配件受到水滴或水溅。

禁将电池投入水、火中或靠近任何过热的环境中。

过拔掉电源适配器插头断开电网电源。

避免电池电量的流失。

08.乘坐飞机时,请遵守航空公司有关规定和条例,在飞机起飞前关闭本产品,以免

绝缘层被损坏导致触电。 10.如机器发生冒烟或其他异常现象,请迅速拔出电源插头,避免引起意外事故,并 联系当地经销商进行维修。

09.电源线不能被挤压、拉扯、弯曲、打结、悬挂重物或被人践踏。以防止电源线的

02.请勿将产品及配件接触水及湿气,不要在靠近水的地方使用本设备,也不要将产

03.请勿自行打开或任意拆解、维修电池组件,如果电池更换不当会有爆炸危险,严

04.本产品由外接电源适配器(DC18V==-1.66A)充电后使用,充完电后可方便的通

05.当用户暂不使用本产品时,请将产品"电源开关"关闭(参见产品操控示意图)。

 
06.当禁止使用无线设备或设备的使用会引起电子设备的干扰与安全隐患时,请关闭

危险标志的区域,有"关掉双向无线电设备"标志的区域。

11.充电时请将产品放置于空旷的区域充电,远离可燃物,以免引起火灾。

12.仅适用于非热带气候条件下安全使用,仅适用于海拔2000米以下地区安全使用。

01.十度原声HIFI音箱,80W功率; 02.配置4寸低音喇叭*2+1.5寸丝膜高音喇叭*2; 03.14.4V 5200毫安A品动力电池,保用三年; 04.智能蓝牙5.0,支持网络同步教材、音乐在线播放 06.多种麦克风音效,独立麦克风音量调节; 07,UHF双无线合金麦克风; 08.支持TF卡、U盘音乐播放功能。



01.电源开关: ON方向为开机,OFF方向为关机,不使用时请注意关闭电源开关。 03.直播接口: 将机器通过直播线与手机连接,即可打开手机直播APP软件进行直播

04.USB接口(仅限数据传输读取U盘)

06.DC 18V输入口:本音箱设备充电输入口,请使用原厂标配充电器为本机充电。

99901

09.流行 10.专业 08.原声 12.上一曲 13.播放/暂停 14.下一曲 11.音效

a.短按此按键可进行菜单选择,用来切换蓝牙模式、U盘播放、TF卡播放、UHF无线

b.在TF卡或U盘模式下长按"M"键显示屏显示"ONE"为单曲循环,再次长按显示 屏显示"ALL"为全部循环。 16.音乐音量

音乐播放功能说明 01.本机U盘、TF卡插口,支持即插即用,支持MP3 、WAV、 WMA、 FLAC和

APE音乐格式播放、解码音质表现突出高保真立体音设计给你全新的音乐体验。 02.播放/暂停按键:在播放状态时,短按此键可暂停播放歌曲,再次短按此键即可继 03.上一曲/下一曲按键:在音乐播放模式下,短按此键可以进行播放列表上下选曲。

1.Switch ON / OFF:

frequency point.

1.Long press " U " to switch on and

there will be UHF frequency point by

default shows on the screen. Turn

on the speaker, then speaker and

microphone will connect automati-

off and the screen will go out.

3.Long press "+" to increase mic

the microphone from 0-20.)

volume while long press "-" to decr-


ease mic volume.(Volume level on

2.Short press "+" or "-" to change

cally. Long press "也" again to switch

第一步: 开机按模式 "M"键切换到蓝牙模式(当主机提示"蓝牙已准备好,正在等 待配对"显示屏上显示"BLUE"时为蓝牙模式) 第二步:打开手机,进入手机的"设置"菜单,找到蓝牙功能选项,打开手机的蓝牙 功能,点"扫描"按钮,待搜索到"T11"连接即可;同时主机会提示蓝牙已

第三步: 配对成功后,即可通过T11播放手机教学教材、培训资料、歌曲播放等。同时 也可与无线麦克风配合使用,实现诗歌朗诵,通过手机K歌软件实现同步K歌

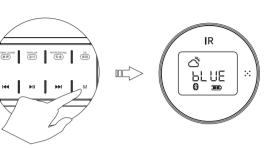


充电时,请先将主机电源开关关闭,关机状态充电,请用原厂标配电源适配器接上 220V插座进行充电,充电时间约4-6小时充满,充满电后应拔掉电源适配器插头断开 ◎电瓶电量指示:显示屏上有电量指示图标,共分为4格,每格代表25%的电量,4格

全满时为100%,3格为75%……依此类,当主机显电量提示符为"□"空格时表示电 池低电,请及时充电,充电时电量指示图标会闪烁,充满电后电量指示图标"皿"4格 全满,充满电后电池要继续充电1小时,这样能延长电池使用时间。 ◎若电池欠压,请在48小时内把电充满,当主机电量完全耗尽自动关机后请将主机放

置在空旷的区域远离可燃物品关机充电 。

1.在正常情况下,遥控器应遥控接收窗前约6米、30度范围内使用。 2.操作遥控器时,将遥控器对准机器的遥控窗口,遥控器与机器之间不应有障碍物。 3.如果遥控接收器处于直接接收强光照射的位置遥控器可能失效。在此情况下,请将 机器移开,以避免直接照射。 4.避免新旧电池混合使用,定期检查遥控器电池是否更换。

注:说明书为示意图,具体以实物为准。

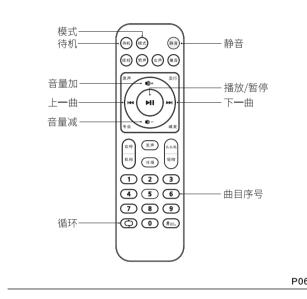

可实现UHF无线扩音;在开机状态下,长按" 🛈 " 电源 开关键,屏幕熄灭表示话筒已关机。在使用过程中短按 "+"为切换加频点,长按"+"为加音量;短按"-为切换减频点,长按"-"为减音量。

(注:话筒15秒后会屏保,短按任意一个键即可点亮屏幕。) **02.UHF无线话筒手动配对:**(此操作方法运用于话筒 无声时手动配对)

——频点减 3秒,UHF闪烁表示已进入UHF无线配对状态。

闪烁表示已进入UHF无线配对状态,将手持式UHF无线 话筒开机,显示当前的频点,快速短按开机键3次当前频 点停止闪烁,表示第二支无线话筒与机器已手动配对成 功;即可实现双无线扩音。

足;当显示电量提示符为"[]"空格时,表示电池低电,请及时充电。 ◎充电时,先将手持式UHF无线话筒关机取出随机配备的USB充电线,给手持式 UHF无线话筒充电;充电时,手持式UHF无线话筒红色指示灯长亮,充满电后红色

03、充完电后可方便的通过拔掉电源适配器插头断开电网电源; 04、本机自带充电线,适用各类手机电源适配器为本机充电。

01.UHF无线话筒开/关机 长按" 🛈 "键开机,屏幕显示默认频点值,打开主机即

将手持式UHF无线话筒开机,显示当前的频点,快速短按 开机键3次当前频点停止闪烁,表示无线话筒与机器已手 动配对成功。第二支话筒再次长按"M"键3秒,UHF

注:配对第二支话筒时频点一定要和第一支话筒频点错 开,以免相互干扰。

03.UHF无线话筒电量说明:

01、充电时间约3~4小时充满; 02、第一次使用时,手持式UHF无线话筒时电池有小部分电量,但为了达到最佳扩音 效果, 请先充满电再使用;

用户在使用本机过程中,如发现有问题,请按下面的故障检修表逐一检查。仍然 不能解决问题,请找本公司在当地的经销服务商或拨打本公司的客服热线咨询。故障 检修表具体详见下表所示:

额定功率: ≤80W 信噪比: ≥90dB

频率响应: 30Hz-20KHz 输入规格: DC 18V ===1.66A 以上规格为样机技术规格,仅供参考。

Structure Instruction:

clean sound:

Technical Parameters:

reading the user manual.

1.SHIDU HiFi portable speaker, 80W output power;

2.Equipped with 4-inch woofer*2, 1.5-inch tweeter*2;

3.Built-in 14.4V 5200mAh A-grade lithium battery;

4.Bluetooth 5.0, support wireless karaoke function;

6. Multiple microphone sound effects, independent volume adjust-

7.Support double UHFwireless microphone, stable signal and

Power output: ≤80W Frequency response: 30Hz-20KHz

S/N ratio: ≥90dB Recharging voltage: DC 18V 1.66A

Support live broadcast and monitor functions;


8. Support TF card and USB flash drive play music.

Main features:

06 05 04 03 02 **0**1

Welcome to use SHIDU speaker, T11 is a multifunction portable 1.Power on/off

speaker with microphone karaoke functions. Please enjoy it after 2.monitor jack: (Reference function description for details) 4.USB slot: Support USB flash drive, maximum up to 32G. 5.TF card slot: Support TF card, maximum up to 32G. 6.DC 18V Charging port: Pls use original adapter to charge.

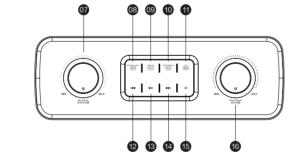


8.Original microphone sound effect 9.Popular microphone sound effect 10.Professional microphone sound effect 11.Sound effect

12.Previous: Short press to select previous audio fi 13.Play/Pause: In audio playing mode, press it to pause; press it again to play. 14.Next: Short press to select next audio file.

TF card mode and UHF mode. b.In music playing mode, long press this button switch to single song repeat with screen display "ONE", short press this button again to switch back to all repeat with screen display "ALL". 16.Music Volume: To adjust the music volume.

3.live broadcast jack: (Reference function description for details)

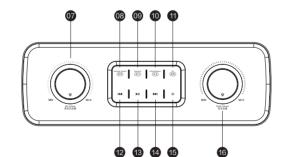

7. Microphone Volume: To adjust the microphone volume.

a.Short press to choose Bluetooth mode, USB flash drive mode,


TF card/USB flash drive play:

The speaker will automatically play the audio file after insert TF card/USB flash drive, and short press the "◄ " / " ▶ " button to select the previous song and the next song. This speaker supports playing MP3 WAV WMA FLAC audio format.

Bluetooth Function:

Please pair your Bluetooth device as follows:

Step 1: Switch on the speaker and press "M" to enter into Bluetooth mode. (The Bluetooth mode is ready with voice prompt "Bluetooth is waiting for connection" and "BLUE" is displayed on the screen.)

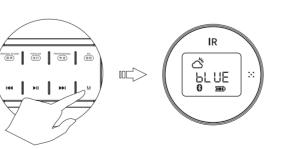

Step 2: From your mobile setting, turn on the Bluetooth function. Then search for "T11" and connect. Bluetooth pairing is successful with a voice prompt "Bluetooth is connected".

Step 3: When playing music, please keep close to the speaker to keep the signal stable. If the distance is too far (more than 10 m), the Bluetooth will be disconnected.

Monitor Function:

1.Plug in your headphones and you can hear the music the machine is playing, including sound of the microphone, to get a more realistic feel for what you're recording live. At the same time, the machine still has sound.

> 2. You can mute it with the remote control, and the machine will have no sound, only the earphones have sound.

Live Broadcast Function: This feature allows you to achieve better recording effects during

 
live broadcasts. When you use our machine to play music and use a microphone to record a live broadcast, use the red cable in the standard configuration. One end is plugged into the headphone jack of your mobile phone, and the other end is plugged into the live broad-

cast jack. This red line is passed from the machine to achieve

Charging function:

better recording sound.

Please power off speaker when charging, please use the standard adapter, the other end connects with the power supply AC 110-220V to charge. Please unplug the adapter timely after fully charged (the charging time is normally 4-6 hours).



Battery status: There are 4 battery indicators on the screen and each represents 25%. Full is 100%, 3 are 75%... Please charge it timely when the speaker show "=" means low battery, please charge in time. The battery indicator will flashes when charging and it will stop flashes after fully charged and battery show " == " 4 indicators are full.


Please recharge the battery within 48 hours if the voltage is too low. Out of power is bad to the battery.

Remote function:

1.Normally, the remote control should be in front of the receiving window and within the scope of 6M & 30°. 2.Please point the remote control toward the receiving window

and avoid the obstacle. 3.Please avoid the strong light. 4.Please don't use old & new battery at the same time.

Note: Please refer to the real product.

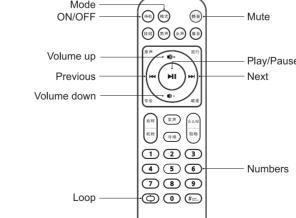

2.Pair the UHF Wireless MIC Manually: (This operation only

suits for no sound from the MIC) Step 1: Switch on the speaker, short press "Mode" key to switch to UHF mode, then long press "Mode" key 3 seconds to enter into UHF wireless pairing status with voice prompt "UHF is waiting

Step 2: Switch on the UHF wireless MIC, short press "+" or "-" to change frequency point. Quick press the " U " 3 times and then current frequency stop flashing means pairing is successful. Please manually pair the second microphone in the same way. Then it's possible to amplify voice with two wireless MIC.

Note: When pairing the second microphone, please stagger the frequency point of the first microphone to avoid interference with

Wireless Microphone Operation:

3.Microphone charging instructions:

In working status, it has sufficient battery power with " I " Indication showed on screen: it's low battery with "1" indication showed on screen and please charge the microphone timely.

Please noted: 1.It takes 3-4 hours to fully charge. 2.Please fully charge the microphone before first use.

Please unplug the adapter after fully charged. 4. The speaker comes with a charging cable, which is suitable for any mobile phone adapter.

Trouble Shooting:

1.Switch on the speaker but no sound 1.1. No audio input: Please retest and set the audio inout; 1.2.Haven't turned on the volume: Please adjust the volume

1.3. The speaker has run out of battery, please charge it to switch

2.2. The speaker is broken: Please contact us for maintenance. 3.No sound with wireless microphone

adjust the volume properly; 3.3. The wireless MIC is low battery: Please change the battery. 4.No sound with MP3 playing

Please turn the format to MP3: 4.2. Chaotic procedure with wrong operation: Please restart the

5.Can only work several minutes after charged 5.1. The battery is damaged, please replace the battery with the

same model; 5.2. The connecting cable of battery is loosened or disconnected: Please contact us for maintenance;

5.3. Hasn't full charged the speaker: Please full charge it before

2. With sound distortion 2.1. The volume is too high: Please turn down the volume properly;

3.1. Haven't switched on the MIC: Please turn on the MIC; 3.2. Haven't turned on the MIC volume on the speaker: Please

4.1. The audios' format in USB flash drive or TF card is wrong:

4.3. Haven't inserted the USB flash drive / TF card properly: Please insert the USB / TF card properly.

SHIDU Guarantee:

We promise 1 year warranty. If you have any questions, please feel free to contact us, we

100% SHIDU Guaranteed Product Satisfaction.

will try our best to provide you the best service. www.10shidu.com Email:service@10shidu.com