

封底↓

注意:

本手册描述的产品及其附件的某些特征和功能, 仅供参考。

十度数码科技有限公司保留随时更改本手册中任何信息的权利, 无需进行任何提前通知且不承担任何责任。

无担保声明:

本手册中的内容, 除非适用法律要求, 十度数码科技对本手册中的所有内容不提供任何明示或暗示的保证。

在法律允许的范围内, 十度数码科技在任何情况下, 都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、偶发性的损害进行赔偿, 也不对任何利润、数据、商誉或预期的损失进行赔偿。

进出口管制:

需将此产品手册中描述的产品出口、再出口、或者进口, 您应遵守适用的进出口管制法律法规。

深圳市十度数码科技有限公司 地址: 深圳市宝安区西乡街道铁岗社区铁岗社区西乡街道
Shenchen SHIDU Digital Co., Ltd 电话:0755-21635869 邮编:518105
客服电话: **4008 939 488**
官方网站: **WWW.10SHIDU.COM**
十度数码科技是高新技术企业, 自主研发、设计、生产、销售、服务于一体的企业, 产品广泛应用于消费电子、工业控制、医疗设备、安防监控、智能家居等领域, 产品远销全球多个国家和地区, 拥有自主知识产权, 拥有多项发明专利、实用新型专利、外观设计专利、软件著作权等, 产品品质可靠, 售后服务周到, 是您值得信赖的合作伙伴。

关注十度微信公众号
回复型号“H4Plus”
获取产品使用说明书




封面↓

原声手提音响

使用说明书

USER MANUAL

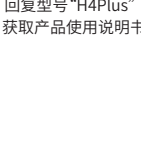

P1↓

安全警告:

1. 请勿将产品及配件靠近火源或任何过热的环境中。
2. 请勿将产品及配件靠近水源及潮湿处, 不要在靠近水的地方使用本设备, 也不要将产品浸入任何液体中, 避免产品及配件受到水渍或水浸。
3. 请勿自行打开或拆解拆解、维修电池组件, 如果电池浸水不当会有爆炸危险, 严禁将电池投入火、火中或靠近任何过热的环境中。
4. 本产品由外接电源适配器(DC5V±2A)充电后使用, 充电时请勿将充电器或充电线及充电头靠近易燃物品, 充电时请勿将本产品放入任何液体中, 避免产品及配件受到水渍或水浸。
5. 当本产品不使用本产品时, 请将产品电源开关旋转至关闭状态关闭电源(参见产品操作示意图), 避免电池电量的流失。
6. 当禁止使用无线设备或设备的使用会引起电子设备的干扰与安全隐时, 请关闭本产品。
7. 在易燃易爆区域, 请关闭本产品, 并遵守相关标示说明, 以免引起爆炸或火灾。易燃易爆区域包括但不限于: 加油站、燃气管道、化工厂、加油站及维修站、有爆炸危险标志的区域、有“关闭双向无线电设备”标志的区域。
8. 乘坐飞机时, 请遵守航空公司有关规定和条例, 在飞机起飞前关闭本产品, 以免造成安全隐患。
9. 若使用电源适配器供电, 应购买配套使用获得CCC认证并满足要求的电源适配器。


①

P2↓

产品特性:

1. 十度原声扬声器, 40W功率, 支持手提。
2. 内置低音喇叭(1.5寸)高音喇叭。
3. 3.7V 4500mAh动力电池。
4. 内置双接收板、双UHF接收麦克风。
5. AUX输入、输出功能。
6. 支持一键录音、UHF播放功能。

主要功能说明:

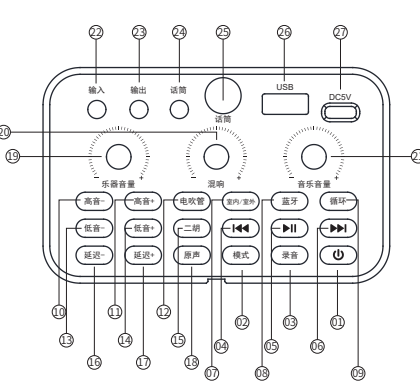

②

P3↓

1.电源开关:长按“电源”键3秒开机/关机, 显示屏幕亮表示正常开机, 再次长按3秒显示屏幕熄灭表示关机。

2.输入选择:短按此按钮可进行菜单选择, 用来切换蓝牙模式、UHF播放、音乐模式、UHF模式。

3.录音/播放按钮

4.上一曲按钮

5.播放暂停按钮

6.下一曲按钮

8.一键蓝牙

蓝牙环境:在音乐播放模式短按“蓝牙”键显示屏幕显示ONE为单曲循环, 再次短按“蓝牙”键显示屏幕显示ALL为全部循环。

10.低音增强按钮

11.高音增强按钮

12.电吹管按钮

13.低音增强按钮

14.低音增强按钮

15.二胡按钮

16.延迟增强按钮

17.延迟增强按钮

18.原声按钮

19.乐器音量:可调节乐器播放音大小。

20.调音器:可调节乐器调音, 使乐器效果更佳。

21.音乐音量:可调节音乐播放音大小。

22.音频输入/输出

23.音频输入/输出

24.3.5mm接口

25.6.35mm接口

26.USB接口:(仅用于数据传输读取)

27. DC 5V输入口

③

P4↓

录音功能说明:


- 1) 连接话筒, 在任意模式下插入外接存储设备(U盘或TF卡), 长按“录音”键进入录音模式开始录音, 录音完成后短按“录音”键保存并关闭播放设备。
- 2) 在音乐播放模式下, 如外接存储设备有录音文件, 按“录音”键进入播放设备状态, 默认播放顺序为最后一个录音文件播放, 在此状态下可以通过上一曲“<<”或下一曲“>>”来选择录音播放文件。

蓝牙操作说明:

第一步:开机按“M”键切换到蓝牙模式显示屏幕上显示“BLUE”时为蓝牙模式。

第二步:打开手机, 进入手机的“设置”菜单, 找到蓝牙功能选项, 打开手机的蓝牙功能, 点“扫描”按钮, 待搜索到“H4Plus”连接即可; 连接成功蓝牙图标停止闪烁。

第三步:配对成功后, 即可通过H4Plus播放手机教学教材、培训资料、歌曲播放等。

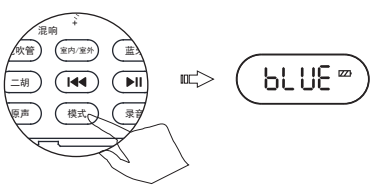

④


P5↓

为主机充电:

当主机低电时, 将随机配带的 USB充电线连接主机DC 5V接口, 另一端连接到电源适配器或两节碱性电池(220V)插座充电, 充电时电池图标闪烁, 充满电后, 电池图标长亮。

注意:

- a. 在工作时, 屏幕电量图标不停闪烁, 表示电力不足, 请及时充电; 本机充电时间约3-4小时充满;
- b. 第一次使用主机时, 电池有小部份电量, 但是为了达到最好的效果, 建议先充满电再使用;

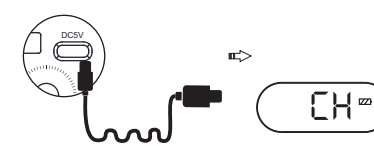


⑤

P6↓

遥控功能说明:

1. 在正常使用下, 遥控器遥控接收范围约10米, 30度范围内使用。
2. 操作遥控器时, 将遥控器对准机器的遥控窗口, 遥控器与机器之间不应有障碍物。
3. 如果遥控器接收器处于直接接收强光照射的位置遥控器可能失效, 在此情况下, 请将机器移开, 以避免直接照射。
4. 请从取出电池盒取出电池, 定期取出电池盒避免电池漏液而受损。

注: 说明书为示意图, 具体以实物为准。

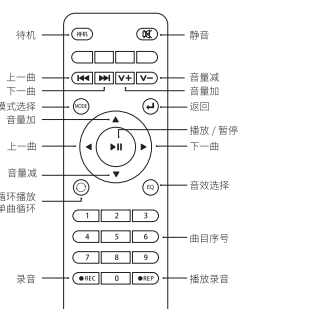

⑥

P7↓

UHF多功能乐器无线麦克风配对及使用方式:

UHF多功能乐器无线麦克风开关:

将开关拨至“ON”状态, 指示灯蓝灯亮表示头盖已开机。

将开关拨至“OFF”状态, 指示灯蓝灯灭, 表示头盖已关机。


UHF多功能乐器无线麦克风手动配对(此操作为适用于麦克风无电时手动配对):

打开主机切换到UHF模式, 长按“M”键3秒, UHF闪烁表示已进入UHF无线配对状态。

再打开乐器无线麦克风, 长按“零”——键配对键, 就可以重新配对无线麦克风, 配对成功后UHF灯闪烁, 配对成功后二声乐器无线麦克风, 再次长按“M”键3秒, UHF闪烁表示已进入UHF无线配对状态, 再打开乐器无线麦克风, 长按“零”——键配对键3秒, 当主机提示“UHF”已配对成功, 表示第二支乐器无线麦克风与主机已手动配对成功, 即可实现双无线扩音。

注:

在UHF无线扩音使用过程中长按“零”——键配对键为断开UHF无线扩音连接, 需要再次使用UHF无线扩音时要重新依照以上方法进行配对; 频点: 在UHF无线扩音状态下, 短按“零”键为单倍音量, 短按“零”键为单倍音量。

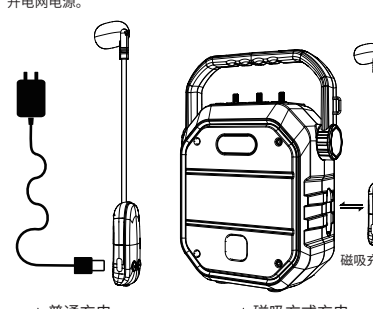


⑦

P8↓

为乐器麦克风充电:

 当无线麦克风蓝色指示灯不停的闪烁时, 表示无线麦克风电池低电, 将开关拨至“OFF”状态关闭无线麦克风, 再将无线麦克风DC 5V接口连接到数据线TYPE-C接口, 另一端数据线USB接头与DC 5V的USB电源接口连接; 充电时无线麦克风红色指示灯长亮, 充满电后红色指示灯熄灭, 充电时间约3-4小时充满, 充电完成后请及时连接充电线断开充电网电源。

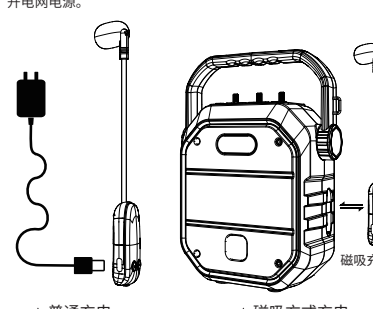

⑧

P9↓

3. 为了保证电池使用寿命, 建议使用完再充电, 频繁充电将加速电池老化, 长时间不用时应每隔两个月充一次电;

4. 因喇叭磁性较强, 不可将机器和银行卡等带磁性的东西放在一起, 以免造成磁损而带来不必要的麻烦;

5. 本产品所有配件皆按本机工作需要设计, 如需更换配件尽量使用本公司原装配件, 以达到最佳工作效果;

6. 本产品在使用过程中可能会出现轻微发热, 这属于正常现象;

7. 请使用抗菌静电布来清洁擦拭本产品, 在清洁本产品时请先关闭电源开关, 并断开所有外部连接, 请勿用化学清洁剂擦拭(如:酒精、苯等化学试剂或有磨粉性的清洁剂擦拭);

8. 请勿摔落、挤压或碰撞本产品, 请勿擅自拆解本产品, 否则不能享受本公司的免费保修服务。

⑨

P10↓

售后服务须知:

一、本公司提供的售后服务:

1. 咨询服务:用户在使用产品前, 请仔细阅读本产品的使用说明书, 在使用过程中遇到问题, 均可与当地经销商联系, 或致电十度全国统一客服热线 **4008 939 488**

2. 维修服务:本产品自出厂之日起(自购机之日起7天内), 正常使用出现人为故障, 速将本产品、配件和包装的外观与完整(若外观损坏, 作保修处理), 经检验确认后, 可选择维修或退货, 用户可到当地十度委托经销商联系。

3. 保修服务:保修期内, 正常使用出现了非人为故障, 均可享受免费保修服务(主机一年内免费保修, 若人为损坏, 作收费维修处理)。

4. 收费维修服务:产品在购机之日起一年到三年内, 出现故障可收费维修, 用户需要支付维修所需的所有材料费、运输费和合理的维修人工费。

5. 以下情况不在三包范围内, 本公司可提供有偿服务:

- (1). 超过三包范围;
- (2). 意外因素或人为行为导致的产品损坏(如:未按使用说明书操作、维修或保管、错误安装造成的故障、接入不合适的电源、进水、受潮、摔坏等);
- (3). 无有效三包凭证;
- (4). 因不可抗力如地震、火灾、水灾、雷击等导致的产品故障或损坏;
- (5). 未经本公司许可, 擅自拆卸、修理或改装;
- (6). 在运输、搬运过程中造成故障、损坏。

⑩

P11↓

二、关于售后服务的说明:

1. 用户自购之日起, 不能有效证明的, 以生产日期为准;
2. 质量问题不包括用户个人对音质、音色等主观意见, 不作为退换货的条件;
3. 配件、外壳、说明书、包装不在保修服务范围内;
4. 凡已购买型号产品的服务, 本公司仅做功能性修复(外观可能与原产品有异);
5. 经销商向您做出的非本公司保证的其他承诺, 本公司不承担任何责任;
6. 用户在享受服务之前, 请将重要资料另行备份或记录, 因维修或其他任何原因造成的损失, 本公司概不负责, 因保管不善等原因将机内资料丢失给第三者所造成的损失(如:银行卡号、密码、资料被更改等), 本公司概不负责;
7. 在免费保修期内, 本公司或授权服务机构拥有更后的故障的所有权及处置权。
8. 使用本产品前, 请仔细阅读本产品的使用说明书, 并妥善保管机内凭证, 本凭证是证明所有权归属深圳市十度数码科技有限公司所有, 如有变动, 恕不另行通知。

客服热线时间: 每周一至周五9:00-18:00 (法定节假日除外)
全国统一服务热线: 4008 939 488 公司网址: www.10shidu.com

⑪

P12↓

产品保修卡

购买产品时, 请认真填写此卡, 并予以妥善保管。

用户档案

用户姓名	
性别	
通讯地址	
邮编	
联系电话	
购买地点	
购买日期	
品名及规格	
销售单号	
机身编号	
经销商签名	
用户签名	

经销商盖章处

⑫

P13↓

Welcome to use SHIDU portable speaker. For better experience the product, please read the instruction carefully before use.

Safety Warnings:

1. Please don't put the product and accessories nearby fire or other hot environment.
2. Please don't put the product and accessories nearby the water or damp places. Don't use the products near the water. In addition, avoid putting it into any liquid in case that the product and accessories will be damped.
3. Please don't optionally open or tear down the battery accessories. It may cause explosion if the battery replaced improperly. Avoid putting the battery into water, fire or near to any hot environment.
4. This product needs to use the power adapter (DC 5V, 2 A) to charge. After charged, please remember to unplug the power cord or power socket. We suggest stop other operations under the charging mode. Please cut off the power supply first if you need to use it.
5. If you don't need to use it, please switch off the speaker to avoid the loss of power.
6. Please turn off the product if the wireless equipment is prohibited (it may lead to the disturbances of electronic equipment or hidden danger).
7. Please turn off the product in the flammable and combustible areas, at the same time adhere to the instructions to avoid the explosion and fire hazard. The flammable and combustible areas include: gas station flammable or chemical products, transportation and storage facility, the areas with explosion dangerous sign and the areas with the "Turn off the bi-directional wireless equipment" etc.

Panel Function Description:

1. **Power ON/OFF:** Press "O" key for 3 seconds, and the display screen lights up, it means the speaker has been turned on, press again for 3 seconds, the display screen is off, it means the speaker turned off.
2. **Input option:** To select AUX In mode, Bluetooth mode, USB flash drive mode, UHF mode.
3. **Recording:**
4. **Previous/Press:** "M" to select previous audio file. Long press for fast rewinding.
5. **Play/Pause**

⑬

P14↓

8. When you take a plane, please obey the related rules and disciplines and remember to turn off the amplifier to avoid the hidden danger.

9. Please don't crush, draw, bend, tie or tread by people, avoiding the wired broken to cause to electric shock.

10. Please take out the adapter if the speaker is belching black smoke or abnormal phenomena to avoid the accident then contact local agency to repair.


11. Only suitable for safe use in non-tropical climate conditions. Only suitable for safe use in areas below 2000 meters above sea level.

Features:

1. 40W high power portable speaker;
2. Equipped with a 4-inch woofer and a 1.5-inch tweeter;
3. 3.7V 4500mAh large-capacity battery;
4. Supports dual UHF magnetic microphones;
5. Support AUX audio input and output functions;
6. Supports recording and USB flash drive playback functions.

⑭

P15↓

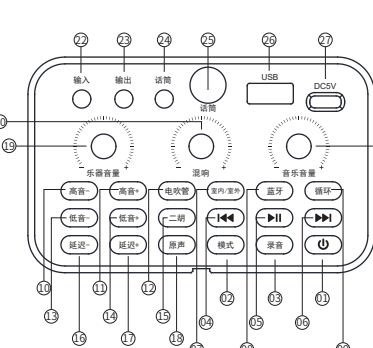

6. Next: Short press "M" to select next audio file. Long press to fast forward.

7. Indoor/outdoor mode: Press this key to switch indoor/outdoor mode.

8. One key Bluetooth: Short press this button in any mode to pair the Bluetooth, long press this button in Bluetooth mode to disconnect.

9. Loop key: When play music on TF card/USB flash drive, short press this button to switch to single song repeat with screen display "ONE", short press this button again to switch back to all repeat with screen display "ALL".

10. Treble Decrease Button

11. Treble Increase Button

⑮

P16↓

12. Electric Wind Instrument Button

13. Bass Decrease Button

14. Bass Increase Button

15. Echo Button

16. Delay Decrease Button

17. Delay Increase Button

18. Original Sound Button

19. Instrument volume control: To adjust the volume of the instrument

20. ECHO: To adjust the echo effect of MIC.

21. Volume control: To adjust the music volume.

22. Audio input

23. Audio output

24. 3.5mm Microphone Interface

25. 6.35mm Microphone Interface

26. USB port: Support USB flash drive play, maximum support 32G.

27. DC 5V in

⑯


P17↓

2. Play Recording: Insert the USB drive or TF card with the recording file, and press "M" key to play recording. The default playback order is the last recording file. In this state, you can press "M" key to select the previous and next recordings.



Bluetooth Function:

1. Turn on the speaker and press "M" key to enter into Bluetooth mode with "u.s.b" icon on the screen.
2. Turn on the Bluetooth function of your mobile phone, then search for "H4Plus" and connect. The Bluetooth icon stops flashing when the connection is successful.
3. When playing music, please keep the amplifier close to the Bluetooth-enabled device to maintain a stable connection.

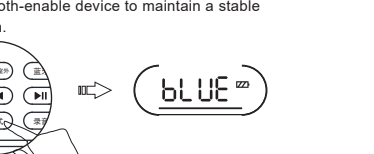

⑰

 
P18↓

Charging Instructions:

When the speaker is low on battery, connect the charging cable to the speaker's DC 5V port, connect the other end to a 5V power adapter to charge. The battery indicator will flash during charging. When fully charged, the battery icon will stop flashing.

Note:

- a. If the battery indicator on the screen flashes continuously during operation, it indicates low battery. Please charge immediately. The speaker will fully charge in approximately 3-4 hours.
- b. When using the speaker for the first time, it is recommended to fully charge the speaker before use.

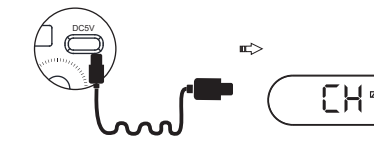

⑱

 
P19↓

2. When operating the remote control, aim the remote control at the remote control window of the unit. There should be no obstructions between the remote control and the unit.

3. If the remote control receiver is directly exposed to strong sunlight, the remote control may malfunction. In this case, move the unit away from direct sunlight.

4. Avoid mixing old and new batteries. Check the remote control batteries regularly to ensure they have been replaced.

Note: This manual is a schematic diagram; please refer to the actual device for details.

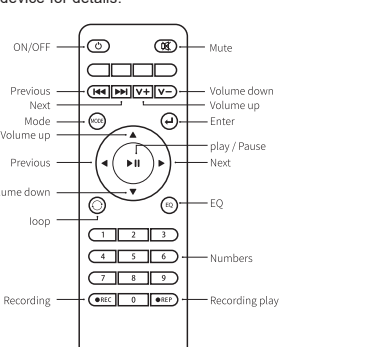

⑲

P20↓

Wireless Microphone Operation:

1. Power on / off:

Flip the microphone switch to "ON" and the blue indicator light on, indicating it's powered on.

Flip the microphone switch to "OFF" and the blue indicator light go off, indicating it's powered off.


2. Pair the microphone manually:

Step 1. Turn on the speaker, short press "M" key to switch to the "UHF" mode. Then press and hold the "M" key for 3 seconds. The "UHF" icon on the screen will flash, indicating that it has entered the UHF wireless pairing state.

Step 2. Turn on the wireless microphone, press and hold "O" key for 3 seconds, the "UHF" icon on the speaker's screen will stop flashing. Indicates a successful pairing.

Step 3. Repeat the above two steps to pair the second microphone.

Note: During the use of the microphone, press and hold "O" key will disconnect the microphone. If you need to reconnect the microphone, please manually pair it according to the above three steps.

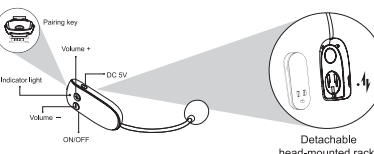

⑳

P21↓

Volume Control:

If the speaker howling or in a small volume, adjust the volume by press "+" or "-" on the wireless microphone.

Charging instructions of wireless microphone:

When the microphone blue indicator light flashes means low battery. Please turn it off and connect the charging cable to the speaker's DC 5V port, connect the other end to a 5V power adapter to charge. The red indicator light will be on when charging, and it will go out after fully charged.

Notes:

1. The normal charge time is 3-4 hours. Unplug the charger as soon as it is fully charged.
2. When using the speaker for the first time, it is recommended to fully charge the microphone before use.

㉑

P22↓

Product Usage Precautions:

1. To achieve optimal microphone amplification, place the microphone about 1-2 cm in front of the instrument and aim your sound towards the microphone. If there is any feedback, lower the volume or increase the distance between the instrument and the microphone to prevent interference.
2. Avoid frequent plugging and unplugging of the microphone jack to prevent loosening and poor contact. Do not plug the microphone and sound source incorrectly.
3. To maximize the lifespan of the lithium battery, it is recommended to charge it after use. Frequent charging will accelerate the aging of the battery chip. If not used for extended periods, charge it every two months.
4. Due to the strong magnetic field of the speaker, do not place the device together with magnetic objects such as bank cards to avoid demagnetization and unnecessary trouble.
5. All accessories for this product are designed specifically for the device's operation. If replacement parts are required, use genuine parts from our company to ensure optimal operation.
6. This product may become slightly warm during charging and normal use. This is normal.

㉒

P23↓

7. Please use a soft anti-static cloth to clean this product. When cleaning, turn off the power switch and disconnect all external connections. Do not use chemicals (such as alcohol, benzene, or other chemical cleaners or abrasive cleaning agents).

8. Do not drop, throw, or step on this product. Do not disassemble it without authorization, as this will void our warranty.

㉓

P24↓

3. No sound with MP3 playing

1. The audio format in USB flash drive or TF card is wrong. Please turn the format to MP3;
2. Chaotic procedure with wrong operation: Please restart the speaker;
3. Haven't inserted the USB flash drive / TF card properly: Please insert the USB / TF card properly.

4. Can only work several minutes after charged

1. The battery is broken: Please change a new same battery;
2. The connecting cable of battery is loosened or disconnected: Please contact us for maintenance;
3. Haven't fully charged the speaker: Please full charge it before using.

㉔

P25↓

SHIDU Guarantee:

100% SHIDU Guaranteed Product Satisfaction.

We promise 1 year warranty.

If you have any questions, please feel free to contact us, we will try our best to provide you the best service.

www.10shidu.com Email: service@10shidu.com

㉕

P26↓

Specification:

Model:	H4Plus	Power output:	440W
Working temperature:	-10 ~ 45℃	S/N ratio:	>85dB
Frequency response:	20Hz-18KHz	Charging voltage:	DC5V-2A

Trouble Shooting:

1. Switch on the speaker but no sound

- 1.1. No audio input: Please use another better audio files;
- 1.2. Haven't turned on the volume: Please adjust the volume properly.

2. With sound distortion

- 2.1. The volume is too high: Please turn down the volume properly;
- 2.2. The speaker is broken: Please contact us for maintenance.

㉖