




声霸®会议教学扩声设备 使用说明书 USER MANUAL

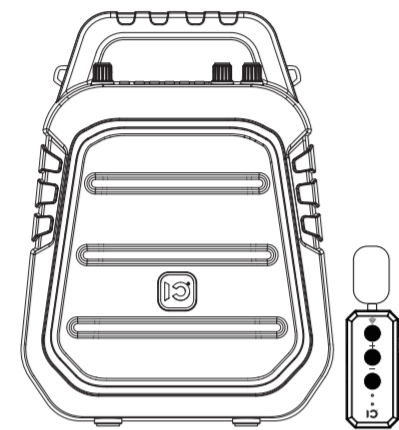

深圳市十度数码科技有限公司
Shenzhen SHIDU Digital Co., Ltd.
电话: 0755-21635866 全国服务热线: 4008 939 488
地址: 深圳市宝安区福海街道和平社区新兴工业园二期二楼八栋
Building 8, Zone 2, Xingping Industrial Park, Shaping Community, Fuhai Street, Bao'an District, Shenzhen, China
执行标准: GB 4943.1-2022

本产品为电子产品, 使用过程中可能会出现因使用不当造成的故障, 如遇到故障, 请及时联系客服, 本产品为电子产品, 使用过程中可能会出现因使用不当造成的故障, 如遇到故障, 请及时联系客服, 本产品为电子产品, 使用过程中可能会出现因使用不当造成的故障, 如遇到故障, 请及时联系客服。



关注十度微信公众号
回复型号“S97”或“声霸”
获取产品使用说明书

尊敬的用户:
您好!
欢迎您使用SHIDU十度数码产品!
SHIDU十度数码产品将以高科技的品质和优良的服务进入您的工作和生活, 您一旦拥有, 就会真切地感受到它的卓越性能和优良品质, 让您时刻都能享受到生活的轻松愉快。为了能让您更好的体验十度数码的精品品质, 请您在使用本产品前, 认真阅读本说明书, 如有不解之处, 您可向本公司客服人员咨询。

无辐射声明:
本手册中的内容, 除非适用法律要求, 十度数码科技对本手册中的所有内容不提供任何明示或暗示的保证, 在法律允许的范围内, 十度数码科技在任何情况下, 都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、继发性的损害进行赔偿, 也不对任何时间、数量、质量或可预期的损失承担责任。

进出口管制:
若您将此产品手册中描述的产品出口、再出口或者进口, 您应遵守适用的进出口管制法律法规。

P01 P02

安全警告:
01. 请勿将产品及其配件靠近火源或任何过热的环境中。
02. 请勿将产品及其配件接触水及湿气, 不要在靠近水的地方使用本产品, 也不要将产品浸入任何液体中, 避免产品及配件受到水浸或水渍。
03. 请勿自行打开或任意拆解、维修电池组件, 如果电池更换不当会有爆炸危险, 严禁将电池投入火、水中或靠近任何过热的环境中。
04. 本产品由外接电源适配器(DC 15V±2A) 充电后使用, 充电后可方便的通过适配器直接连接插头断开电源。
05. 当用户不使用本产品时, 请将产品“电源开关”关闭(参见产品操作示意图), 避免电池的流失。
06. 当禁止使用无线设备或设备的使用会引起电子设备的干扰与安全警示时, 请关闭本产品。
07. 在易燃易爆区域, 请关闭本产品, 并遵守相关标示说明, 以免引起爆炸或火灾, 易燃易爆区域包括但不限于: 加油站、易燃易爆化工制品运输及存储设备、有爆炸危险标志的区域, 有“关闭双向无线电设备”标志的区域。
08. 乘坐飞机时, 请遵守航空公司有关规定和条例, 在飞机起飞前关闭本产品, 以免造成安全隐患。
09. 电源线不能受挤压、拉扯、弯曲、打结、悬挂重物或被人员踩踏, 以防止电源线的绝缘层损坏导致触电。
10. 如机器发生冒烟或其他异常现象, 请迅速拔出电源插头, 避免引起意外事故, 并联系当地经销商进行维修。
11. 充电时将产品放置于空旷的区域充电, 远离可燃物, 以免引起火灾。
12. 仅适用于非热带气候条件下安全使用, 仅适用于海拔2000米以下地区安全使用。

P03 P04

产品特点:
01. 40W功率, 声音覆盖达2000平米;
02. 智能蓝牙5.3, 无线科技OK功能;
03. DSP音效处理;
04. 支持蓝牙、U盘播放功能;
05. 11.1V 2200mAh动力电池;
06. 配置4寸低音+2寸高音喇叭;

面板功能说明:
产品(顶部)功能面板说明:

01. 电源开关: 长按“**Q**”键3秒开机语音提示后, 显示屏常亮表示正常开机, 再次长按3秒显示屏常亮表示关机。
02. 输入选择: 短按此键“**M**”可进行菜单选择, 用来切换音频输入模式、蓝牙模式、U盘播放、TF卡播放、收音模式。
03. 循环键: 在音乐播放模式短按“**C**”键显示屏显示ONE为单曲循环, 再次短按“**C**”键显示屏显示ALL为全部循环。
04. 上一曲按键
05. 播放/暂停/播放
06. 下一曲按键

P05 P06

蓝牙功能操作说明:
第一步: 开机按“**M**”键切换到蓝牙模式显示屏上显示“BLUE”时为蓝牙模式。
第二步: 打开手机, 进入手机的“设置”菜单, 找到蓝牙功能选项, 打开手机的蓝牙功能, 点“扫描”按钮, 待搜索到“SD-S97”连接即可; 连接成功蓝牙图标停止闪烁。
第三步: 配对成功后, 即可通过SD-S97播放手机教学材料、培训资料、歌曲播放等。同时还可与无线麦克风配合使用, 实现诗歌朗诵, 通过手机K歌软件实现唱K歌等功能。

产品(背部)面板说明:

07. 混响调节: 可调节混响深度, 使演唱效果更好。
08. 麦克风音量: 可调节话筒音量大小, 使话筒声音合适。
09. 音乐音量: 可调节背景音乐播放声音大小。

音乐播放功能说明:
01. 本机U盘、TF卡接口, 支持即插即用, 支持MP3、WAV、WMA、FLAC和APE音乐格式播放, 解码器表现突出, 高保真立体声设计给您全新的音乐体验。
02. 播放/暂停键: 在播放状态下时, 短按此键可暂停播放歌曲, 再次短按此键即可继续播放。
03. 上一曲/下一曲按键: 在音乐播放模式下, 短按此键可以进行播放列表上下选取。

FM收音:
在开机状态下, 短按“**M**”键调整至FM收音模式, 此时屏幕显示FM电台频率; 再长按“**M**”键进入自动搜台模式; 自动搜台完成后, 主机将自动保存搜索到的广播频道, 可通过短按“**4**”或“**5**”键选择保存的FM广播频道。

P07 P08

无线麦克风使用说明:
充电时, 请先将主机电源开关关闭, 关闭状态充电, 请用原厂标配电源适配器上220V插座进行充电, 充电时间约3-4小时充满, 充满后应拔掉电源适配器插头断开电源, 长时间充电会造成电池损坏。

无线麦克风充电:
当主机电量完全耗尽后, 请将主机放置于空旷的区域, 远离可燃物品充电。

无线麦克风音量调节:
如果您遇到反馈或音量低, 请调节无线麦克风的音量“-”键是音量减小, “+”键是音量增加。

无线麦克风充电:
当主机电量完全耗尽后, 请将主机放置于空旷的区域, 远离可燃物品充电。

P09 P10

无线麦克风使用说明:
1. 在正常情况下, 遥控器应接收距离约9米、30度范围内使用。
2. 操作遥控器时, 将遥控器对准接收器的接收窗口, 遥控器与接收器之间不应有障碍物。
3. 如果遥控器接收窗处于直接接收强光源射的位置遥控器可能失效, 在此情况下, 请将遥控器, 以避开强光源。
4. 避免非授权他人使用, 定期检查遥控器电池是否更换。
注: 说明书为示意图, 具体以实物为准。

无线麦克风使用:
1. 正常充电时间约1小时;
2. 第一次使用无线麦克风充电, 电池有少量电量, 但为了达到最佳扩音效果, 请先充满电再使用。
3. 充满电后可方便的通过拔掉电源适配器插头断开电源。

P11 P12

无线麦克风使用:
1. 正常充电时间约1小时;
2. 第一次使用无线麦克风充电, 电池有少量电量, 但为了达到最佳扩音效果, 请先充满电再使用。
3. 充满电后可方便的通过拔掉电源适配器插头断开电源。

P13 P14

无线麦克风使用:
1. 正常充电时间约1小时;
2. 第一次使用无线麦克风充电, 电池有少量电量, 但为了达到最佳扩音效果, 请先充满电再使用。
3. 充满电后可方便的通过拔掉电源适配器插头断开电源。

P15 P16

产品使用注意事项:
1. 为了达到最佳扩音最佳效果, 请将扬声器放置于前方1-2CM处对准耳朵发声, 若有啸叫, 可适当减小音量或将扬声器与耳朵的距离稍稍拉远, 以防互相干扰;
2. 尽量避免频繁插拔麦克风接口, 以免造成接口松动而引起接触不良, 不可将话筒筒和话筒插嘴;
3. 为保证锂电池使用寿命, 建议使用完再充电, 频繁充电将加速电池芯片老化, 长时间不用时应每隔两个月充一次电;
4. 因喇叭磁性较强, 不可将机器和银行卡等带磁性的东西放在一起, 以免造成损失而带来不必要的麻烦;
5. 本产品所有配件按整机工作需要设计, 如需要更换配件请使用本公司原装配件, 以达到最佳工作状态;
6. 本产品在充电和正常使用过程中可能会轻微发热, 这属于正常现象;
7. 请使用防静电布来清洁擦拭本产品, 在清洁本产品时请先关闭电源开关, 并断开所有外部连接, 请勿用化学溶剂擦拭(如:酒精、苯等化学溶剂)或有磨砂性的清洁剂(如:牙膏);
8. 请勿摔落、刮擦或者踩踏本产品, 请勿擅自拆解本产品, 否则不能享受本公司的免费保修服务;
9. 符合“低功耗短距离无线电发射设备自设和技术要求”的具体条款和使用场景, 采用的天线类型和性能、控制、调整及开关等使用方式;
10. 不得擅自改变使用场景或使用条件, 扩大发射功率范围、加大发射功率(包括外加发射功率放大器), 不得擅自更改发射天线;
11. 不得对其他合法的无线电台(站)产生有害干扰, 也不得出现免受有害干扰保护;
12. 应当遵守辐射功率密度的工业、科学及医疗(ISM)应用设备的干扰或其他合法的无线电台(站)干扰;
13. 如对所有合法的无线电台(站)产生有害干扰时, 应立即停止使用, 并采取措施消除干扰后方可继续使用;
14. 在航空器内和机场净空区、法律法规、国家有关规章、标准规定的无线电安全、气象雷达、卫星地球站(含测控、跟踪、接收、导航站)等民用无线电台(站)、机场等的电磁环境保护区域内使用微波功率设备, 应当遵守电磁环境保护及相关行业主管部门的规定;
15. 禁止在以机场跑道中心点为圆心、半径5000米的区域内使用各类型号遥控器;
16. 大功率设备使用时温度和电压的环境条件。
17. 制造型号: SD-S97。

P17 P18

技术规格:
额定功率: <=40W
信噪比: >85dB
频率响应: 80Hz-18KHz
输入规格: DC 15V±2A
以上规格为样品技术规格, 仅供参考。

故障自我检修:
用户在使用本机过程中, 如发现问题, 请按下面的故障检修表逐一检查, 仍然不能解决问题, 请找本公司在当地的经销商或拨打本公司的客服热线咨询, 故障检修表具体如下所示:

故障现象	可能原因	处理方法
打开电源无任何声音	a. 主机没电。 b. 没有输入信号。 c. 音量调节处于最小位置。	a. 给主机充电并检查显示屏是否点亮正常开机。 b. 检查音频设备是否正确输入信号。 c. 适当调节音量。
声音失真	a. 音量调节过大。 b. 音响可能损坏。	a. 再主音量减小。 b. 检查音响是否损坏, 若损坏, 请联系维修。
播放无声	a. 播放源格式不对。 b. 播放源音量过低或静音。 c. U盘/TF卡没有插好。	a. 格式化U盘/TF卡, 重新拷贝音乐文件, 并重新插入或插入U盘/TF卡。 b. 调高播放源音量。 c. 确认U盘/TF卡插好。
充电后仍不能充电	a. 充电器损坏。 b. 充电器与设备不匹配。 c. 充电器电压不足。	a. 更换同型号的充电器。 b. 充电器与设备不匹配, 请更换。 c. 再充电器充足后再使用。

P19 P20

产品保修卡
购买产品时, 请认真填写此卡, 并予以妥善保存。

用户姓名	
性别	
通讯地址	
邮编	
联系电话	
购买地点	
购买日期	
品名及规格	
销售单号	
机身编号	
经销商签名	
用户签名	

经销商盖章处

P21 P22

Welcome to use SHIDU portable speaker. S97 is a multifunctional portable speaker with Bluetooth and voice amplifier functions, which can also play music through TF card and USB flash drive. Please enjoy it after reading the user manual.

Main features:
1. 40W high power output, sound coverage 2000㎡;
2. Adopt UHF wireless technology, stable signal and clear sound;
3. With Bluetooth 5.0—support wireless synchronous Karaoke;
4. 12V 2500mAh A grade lithium battery;
5. Support TF card, USB flash drive play music;
6. Independent audio Input and output interface;
7. Configuring 1"4 inches bass horn and 1"2 inches treble horn.

Technical Parameters:

Power output:	40W	Frequency response:	80Hz-18KHz
Output Impedance:	4 Ω	Charging time:	3-4 hours
Recharging voltage:	DC 15V 2A		

Function Illustration:

10. Audio input
11. Audio output
12. MIC slot: Insert the wired microphone with Ø6.5mm plug.
13. USB slot: Support USB flash drive, maximum up to 32G.
14. TF card slot: Support TF card, maximum up to 32G.
15. DC 15V in: Please use the original charger that comes standard with this speaker for its charging input port.

P23 P24

1.Power ON/OFF: Press this button for 3 seconds to switch on with the screen will light up. Press this button for 3 seconds again to switch off with the screen will go off.
2.Mode selection: Short press“M” key to switch to AUX in mode, Bluetooth mode, TF card mode, USB flash drive mode, FM mode.
3.Loop key: In music playing mode, short press “**C**” to single loop, and short press again to all loop.
4.Previous: Short press to select previous audio file.
5.Play/pause: In audio playing mode, press it to pause; press it again to play.
6.Next: Short press to select next audio file.
7.Echo: To adjust echo effect of MIC.
8.MIC Volume: To adjust the volume of microphone.
9.Volume control: To adjust the volume of music.

TF card/USB flash drive play:
1.The speaker will automatically play the music file after insert TF card/USB flash drive. Support MP3/WAV/WMA/FLAC/APE music format.
2.Play/Pause: when play music, short press “**▶**” button to play & pause music.
3.Previous/Next: when play music, short press “**◀**”/“**▶**” button to choose play previous song and next song.

FM Function:
Switch on the speaker, short press “M” to choose the FM mode with the screen showing radio frequency. Long press “**M**” to enter into automatic channels searching, after searched successfully, the device will save the channel automatically. Please press “**4**” or “**5**” to choose the saved channels.

Bluetooth Function:
1.Switch on the speaker and press“M” to enter into Bluetooth mode and“BLUE”on the screen keep flashing.
2.Turn on the Bluetooth function of your mobile phone and search “S97”. Click it and it will be connected successfully and “BLUE”on the screen stop flashing.
3.After successful connection, it can play the audio files. Please keep the speaker and the Bluetooth devices close for stable signal.

P25 P26

Remote control Operation instructions:

ON/OFF	Mute
Previous	Volume down
Next	Volume up
Mode	Enter
Volume up	play / Pause
Volume down	Next
loop	EQ
1	Numbers
2	
3	
4	
5	
6	
7	
8	
9	
Recording	Recording play

Normally, the remote control should be in front of the receiving window and within the scope of 6M & 30°.

- Please point the remote control toward the receiving window and avoid the obstacle.
- Please avoid the strong light.
- Please don't use old & new battery at the same time.

Note: Please refer to the real product.

P27 P28

Charging Function Operation Instructions:
When charging, please turn off the speaker first. While charging in the off state, please use the original standard power adapter to charge. Charging time is approximately 3-4 hours. After fully charging, unplug the power adapter to disconnect the mains power. Prolonged charging will damage the battery.

Battery Power Indicator: The display shows a power indicator icon, divided into 5 segments. Each segment represents 20% of the battery capacity. 5 segments full indicates 100%, 3 segments represent 60%, and so on. When the speaker displays a blank space, it indicates a low battery. Please charge it promptly. The power indicator will flash during charging. Once fully charged, all 5 segments “**■**” will be full. After fully charging, continue charging for 1-2 hours to extend battery life.

○ If the battery is low on voltage, please fully charge it within 48 hours. The battery must be kept charged even when not in use, otherwise it will be damaged. After the speaker automatically shuts down due to complete battery depletion, please place it in an open area away from flammable materials and charge it while turned off.

Lavalier Wireless Microphone User Manual:
Power On/Off: Press and hold for 3 seconds until the green indicator light illuminates, indicating the microphone is powered on. Press and hold again for 3 seconds until the green indicator light turns off, indicating the microphone is powered off. (This method is for manual pairing when the microphone is silent.)

P29 P30

Power on speaker. In any mode, press and hold the “M” button for 3 seconds. The screen will display “P-” flashing, indicating that you have entered wireless pairing mode. Then power on the lavalier wireless microphone and press and hold the pairing button for 3 seconds. The blue indicator light will stop flashing, indicating successful pairing. You can test speaking.

Wireless Microphone Volume Adjustment:
If you experience feedback or low volume, adjust the volume using the “-” button to decrease the volume and the “+” button to increase the volume.

Lavalier Wireless Microphone Charging:
When the green indicator light on the lavalier wireless microphone flashes continuously during operation, it indicates that the battery is low and needs charging. Please turn off the lavalier wireless microphone and connect the DC5V interface of the microphone to the TYPE-C connector of the data cable, and the microphone to the other end of the data cable to the DC 5V USB power interface. During charging, the red indicator light on the lavalier wireless microphone will remain on; the red indicator light will turn off when fully charged.

SHIDU After sales service:
If you have any questions, please feel free to contact us, we will try our best to provide best service.
WWW.10shidu.com Email: service@10shidu.com

P31 P32