SHIDU

雅梦达

音乐路人专属音响

DREAM CATCHER AUDIO USER MANUAL

使用说明

A款/深圳市爱安家科技有限公司/B款/深圳市爱安家科技有限公司

深圳市十度音响科技有限公司
Shenzhen SHIDU digital Co.,Ltd.
Tel:+86 - 755 - 21635868 Hotline:4008 939 488

Building A8, Zone 2, Xinhe Xinyu Industrial Park, Baoan District, Shenzhen, China

A款/B款地址：

执行标准：GB8898-2011;GB17625.1-2012;GB/T13837.2012

本产品符合欧盟RoHS指令要求，不含铅、汞、镉、六价铬、多溶性溴化物阻燃剂（PBB）、多溶性二苯醚阻燃剂（PBDE）。产品配置以实物为准，产品颜色以实物为准，因光线原因或显示器色差，实际颜色可能稍有差异。本说明书内容如有更改，恕不另行通知。本说明书内容仅供参考，不构成任何担保。本说明书中所有内容均受版权保护，未经授权不得复制、传播、翻译、摘录或用于其他商业目的。

本机内置A款动力电池，本厂不对动力电池造成的损害负责

SOUND OF CHANGE
让改变发声

十度原声 ❷ 天籁之音

尊敬的用户：

您好！
欢迎您使用SHIDU十度音响产品！
SHIDU十度音响产品秉以高科技的品质和优质的服务进入您的工作和生活，您一旦拥有，将会真切体会到它的卓越性能和优良品质，让您时时都能享受到生活的轻松愉快。为了能让您更好的发挥十度音响的精工品质，请您在使用本产品前，认真阅读本说明书，和用不断之处，您可向本公司索要说明。

无线保声明：

本手册中的内容，除非适用法律要求，不提供任何关于手册中的所有内容不提供任何明示或暗示的保证。在法律允许的范围内，十度音响将按现有情况下，都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、或发生的损害或行赔偿，也不对任何利润、数据、商誉或可预期的损失进行赔偿。

请自己留意：

若您将此产品手册中描述的产品出口，再出口或者进口，您应遵守适用的进出口管制法律法规。

安全警告：

01.请您将产品及配件置近火源或任何过热的环境中。
02.请您将产品及配件置触水及潮气，不要在潮湿水的地方使用本设备，也不要将产品放入任何液体中，避免产品及其中部件发生腐蚀失效。
03.请您自行打开或任意拆解，修修改改或维，如果电池更换不当会有爆炸危险，严禁用电池短入水，火中或置近任何过热的环境中。
04.本产品由中国电源直配输（DC 15V/1.66A）充电后使用，充电电后可方便的通过玻璃电源适配器插头新开电网电源。
05.当客户配本产品时，请用产品“电源开关”关闭（参见产品操控示意图），避免电池电量的流失。
06.当禁止使用光线设备或设备的使用会引起电子设备的干扰与安全隐患时，请关闭本产品。
07.在易燃易爆区域，请关闭本产品，并遵守相关标示说明，以免引起爆炸或火灾。
前然原爆区域包括但不限于：加油站、易燃或化工制品装卸及存储区域、有爆炸危险场合的区域；有“关闭双向无线电设备”标志的区域。
08.除按飞机的，遵循于航空公司有关规定和条件，在飞机起飞和关闭本产品，以免造成安全隐患。
09.电源线不能被挤压、拉扯、弯曲、打结、易踩重物或被人踩踏，以防止电源线的绝缘层破损而导致短路。
10.如机器发生冒烟或其他异常现象，请迅速拔出电源插头，避免引起整件事故，并联系当地经销商进行维修。
11.充电时请将产品放置于空旷的区域充电，远离可燃物，以免引起火灾。
12.仅适用于非热带气候条件下安全使用，仅适用于海拔2000米以下地区安全使用。

产品特性：

01.本产品可与个人电脑、DVD、VCD、CD、LD、TC、MP3、录他、电子钢琴等任何有音频输出的录音设备使用。
02.十度原声®音响，100W功放，支持手提。
03.配置6Ω/ 6.5寸低音喇叭，3寸中音喇叭，20W*2。
04.DC 18V 5000mAh 大容量锂电池，续航时间8~9小时。
05.配备6.35粗芯手提麦克风，配置独立音频输入，输出，监听接口，直播、内录、立体声录播入。
06.支持TF卡、U盘播放功能。
07.选用采用UHF无线接收技术，高灵敏度动圈麦克，CNC高精度铝合金金属外壳。
08.支持直播功能。

前箱功能说明：

产品（前箱）功能面板说明：



01.电源开关：长按“开/关”键3秒开机直播音频示范，电源绿色指示灯亮表示正常开机，再次长按3秒电源绿色指示灯熄灭表示已关机。
02.USB接口（仅限音频播放器USB）
03.TF卡接口　04.蓝牙音箱　05.直播输入口　06.麦克风输出口
07.直播接口：将机器通过直播线与手机连接，即可打开手机直播APP软件进行直播操作。
08.内录

09.蓝牙操作：在蓝牙模式下长按“蓝牙按开”为新开当前蓝牙，在其他模式下短按“蓝牙按开”为一键蓝牙。
10.上一曲　　11.播放/暂停　　12.下一曲
13.模式键开：短按此按键可进行菜单选择，用单双音音频输入模式、蓝牙模式、U盘播放、TF卡播放、UHF模式，但音乐播放模式长按“模式键开”键3秒锁示单音频即为单音频开，再次长按“模式键开”键3秒锁示单音频即为多音频开。
14.DC 18V输入口：本音箱设备充电输入口，请使用随厂标配充电器为本机充电。
15.麦克风口：本机支持有线麦克输入（标配不含有线麦克）。
16.音频输入口　　17.录播输入口　　18.电源指示灯
19.音响/录播指示：可调节音响/录播音频，使音响/录播效果更佳。
20.音响/录播音量：可调节音响/录播音频效果的大小。
21.音乐音量：可调节音乐播放效果的大小。
22.音乐低音：可调节音乐播放低音，使音乐更动听。
23.音乐高音：可调节音乐播放高音，使音乐更动听。
24.麦克风音量：可调节麦克风音量大小，使麦克风声音合适。
25.麦克风低音：可调节麦克风的低音效果。
26.麦克风高音：可调节麦克风的高音效果。
27.麦克风混响：可调节混响强弱，使混响效果更佳。
28.延迟：可调节混响延迟，使混响效果更佳。

音乐播放说明：

01.系统U盘：TF卡接口，支持标准规格，支持MP3、WAV、WMA、FLAC和APE音乐格式播放，解码音质表现优良保真度高音质设计符合音响音质标准。
02.▶II 播放/暂停按键：在播放状态时，短按此键可暂停播放歌曲，再次短按此键即可继续播放。
03.⏮ / ⏭：在⏮/⏭下一曲按键，在音乐播放模式下，短按此键可以进行播放列表上下选取。

蓝牙连接操作说明：

第一步：开机，按“模式/循环”键切换蓝牙模式（当系统提示“蓝牙已准备好，正在等待配对”，显示灯蓝灯闪烁时为蓝牙模式）。
第二步：打开手机，进入手机的“设置”菜单，找到蓝牙功能选项，打开手机的蓝牙功能，点“ 扫描 ”按钮，待搜索到“A6”点击“A6”连接即可，同时主机会提示蓝牙已配对。
第三步：配对成功后，即可通过A6播放手机音乐资料，聊天语音，歌曲播放等，同时也可与无线麦克风配合使用，实现动感歌曲。通过手机K歌软件实现同步K歌等功能。

充电功能操作说明：

充电时，请先将主机电源开关关闭，关机状态充电。请用厂标配电源适配器接上220V插座进行充电，充电时间约5~6小时充满，充满电后应拔掉电源适配器插头新开电网电源。
①在工作状态时，绿色电源指示灯呈或红色时表示还有20%的电量，当红色指示灯闪烁时表示电量不足，请及时充电。
②充电时红色电源灯闪烁，充满电后红色电源灯长亮，充满电后电池要继续充电1~2小时，这样延长电池使用时间。
③若电池没反应，请在4小时内把电池充满，电池长时间放置不工作会损保电池寿命，否则会造成电池损坏；当主机电量显全耗尽自动关机后请将主机放置在空旷的区域远离可燃物品关机充电。

充电示意图

UHF无线麦克风按位示意图：

01.UHF无线话筒开/关机：
长按“ ⏻ ”键开机，屏幕显示默认频点值，打开主机即可实现UHF无线广播，在开机状态下，长按“ ⏻ ”电源开关键，屏幕熄灭表示话筒已关机，在使用过程中短按“+”为切换频道点，长按“+”为加音量；短按“-”为切换频道点，长按“-”为减音量。
（注：通常5秒钟自动屏保，短按任意一个键就可以点亮屏幕）

02.UHF无线话筒手动配对：
1.启动手动无线麦克风对手动配对）
a.打开主机按“模式/循环”键切换到UHF模式，再长按“ 模式/循环 ”键3秒，主机显示UHF等待配对，表示已进入UHF无线配对状态。
b.将手持式UHF无线话筒开机,显示当前的频点，快速短按开机键3次当前频点闪烁,主机显示UHF已配对成功，表示无线话筒与机器已手动配对成功，第二次该等再次长按“ 模式/循环 ”键3秒，主机显示UHF等待配对，表示已进入UHF无线配对状态，将手持式UHF无线话筒开机，显示当前的频点，快速短按开机键3次当前频点闪烁，表示第二次无线话筒与机器已手动配对成功，即可实现双无线扩音。
注：配对第二次设置时频点一定要和第一次设置频点错开，以免相互干扰。

03.UHF无线话筒电源说明：
在使用过程中，字体的UHF无线麦克风显示电源量提示符为“ ▮ ”满格时，表示电量充足；当显示电量提示符为“ □ ”空格时，表示电池电量，请及时更换电池。
注：正确打开电池盖，装入电池，注意电池的正负极不要装反。

遥控器功能说明：

01.在正常情况下，请按遥控器按键收音机的关机、30度范围内使用。
02.操作遥控器时，将遥控器对准机器的遥控窗口，请把音响机器之前不应有障碍物。
03.如果遥控器收音机子遥控器收音关闭等时它需要调整不能收放，在此情况下，请将机器移开，以免造成损坏。
04.请换新的电池连接线，切勿把普通碳锌电池装在里面。
注：说明书为示意图，具体以实物为准。

故障自我检查：

用户在使用本机过程中，如发现有问题，请按下面的故障检修表进一检查，仍然不能解决问题，请找本公司在当地的经销商携带或寄回本公司的由重新热调合格，故障检修表执行如下表所示：

故障现象	可能原因	处置方法
灯亮有源无任何声音	a.音机没电。 b.没有输入信号。 c.音量调节到最小位置。	a.请及时充电或检查音源是否点亮正常开机。 b.请检查音源是否有输入信号，以及信号大小是。 c.请调大音量。
声音失真	a.音量调节过大。 b.音响可能损坏。	a.请调大音量。 b.检查音响是否损坏，若损坏，请联系维修。
话筒无声	a.U盘音源格式不对。 b.插件不良引起接触不良。 c.U盘/TF卡没有插好。	a.用户U盘/TF卡，重新刷写音频文件，用音频格式刷成MP3格式。 b.拔插U盘。 c.插好U盘/TF卡。
充电后仅能使用几分钟或使用时间明显比原来时才能使用	a.电池损坏。 b.电池容量低。 c.未充电量不足。	a.更换电池专用的电池。 b.请及时充电保持容量。 c.充电量充足后再使用。

技术规格：

额定功率：≤100W
信噪比：≥80dB
频率响应：30Hz~20KHz
输入阻抗：DC 15V/1.66A
以上指标为样机技术规格，仅供参考。

Welcome to use SHIDU digital speaker, A6 is a multifunction portable speaker with Bluetooth and voice amplifier functions, and it can also support Guitar and Instrument input. Please enjoy it after reading the user manual.

Technical Parameters:

Product model:	A6	S/N ratio:	≥80dB
Rated power:	≤100W	Frequency response:	30Hz-20KHz
Sensitivity:	-49±3dB	Recharging voltage:	DC 15V/1.66A
Music-use time:	4-5 hours	Charging time:	4-5 hours

Structure Instruction:



1.Power on/off: Long press it for 3 seconds, the green battery indicator light on means power on, Long press it again for 3 seconds, the green battery indicator light out means power off.
2.USB slot: Support USB flash drive, maximum up to 32G (MP3 WAV WMA)(Reading the data of USB flash drive only)
3.TF card slot: Support TF card, maximum up to 32G (MP3 WAV WMA).

4.Bluetooth Indicator light
5.Audio input
6.Monitor jack（Reference function description for details）
7.Live broadcast jack（Reference function description for details）
8.Direct recording jack
9.Bluetooth/Disconnect: Short press this in any mode to enter into Bluetooth waiting for pairing status, long press this button in Bluetooth mode to disconnect.
10.Previous: Short press to select previous audio file.
11.Play/Pause: In audio playing mode, press it to pause; press it again to play.
12.Next: Short press to select next audio file.
13.Mode/Loop: Short press it to select the following modes: AUX mode, Bluetooth mode, USB flash drive mode, TF card mode, UHF mode. When play music on TF card/USB flash drive, long press it for 3 seconds to switch to single song repeat, long press it again to switch back to all repeat.
14.DC 18V Charging port: Charging port, please using original adapter to charge.
15.MIC: Support wired Mic (not included).
16.Guitar input
17.Instrument input
18.Battery indicator light
19.Guitar/Instrument ECHO control
20.Guitar/Instrument volume control
21.Music volume control
22.Music bass control
23.Music treble control
24.Microphone volume control
25.Microphone bass control
26.Microphone treble control
27.Microphone ECHO control
28.Microphone DELAY control

Playing from TF card/USB flash drive:

The speaker will automatically play the music file after insert TF card/USB flash drive, and the previous song and the next song can be selected by short press the "⏮" / "⏭" button.

Bluetooth Function:

Please pair with your Bluetooth device as follows:
1.Turn on the amplifier and press "Mode/Loop" key to switch to Bluetooth mode, A voice will prompt "Bluetooth is waiting for connection" and the Bluetooth indicator light will flash.
2.From your mobile setting, turn on the Bluetooth function. Then search for "A6" and connect, Bluetooth pairing is completed with a voice prompt "Bluetooth is connected".
When playing music, please keep the amplifier close to the Bluetooth-enable device to maintain a stable connection.

Monitor Function:

1.Plug in your headphones and you can hear the music the machine is playing, including sound of the microphone, to get a more realistic feeling for what you're recording live. At the same time, the machine still has sound.
2.You can mute it with the remote control, and the machine will have no sound, only the earphones have sound.

Live Broadcast Function:

This feature allows you to achieve better recording effects during live broadcasts.
When you use our machine to play music and use a microphone to record a live broadcast, use the red cable in the standard configuration. One end is plugged into the headphone jack of your mobile phone, and the other end is plugged into the live broadcast jack. This red line is passed from the machine to achieve better recording sound.

Direct Recording Function:

This function allows you to achieve better recording effects for Karaoke APP.
When you are using our machine to sing a song via Karaoke APP, use the red cable to recording the sound directly. One end is plugged into the headphone jack of your mobile phone, and the other end is plugged into the direct recording jack.

Charging the device:

1.Please power off speaker when charging, please use the standard adapter, the other end connects with the power supply AC 220V to charge. Please unplug the adapter timely after fully charged (the charging time is normally 4~5 hours).
2.Battery status: The green battery indicator light turns red color means that 20% battery left. When the red battery indicator light flash, the unit needs recharging.
3.The red indicator light is on all the time when charging, and it will go out after fully charged.
4.Please recharge the battery within 48 hours if the voltage is too low, Out of power is bad to the battery.

Wireless Microphone Operation:

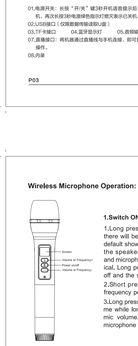

1.Switch ON / OFF:
1.Long press " ⏻ " to switch on and there will be UHF frequency point by default shows on the screen, Turn on the speaker, and then the speaker and microphone will connect automatical. Long press " ⏻ " again to switch off and the screen will go out.
2.Short press "+" or "-" to change frequency point from 700MHz-740MHz.
3.Long press "+" to increase mic volume while long press "-" to decrease mic volume, (Volume level on the microphone from 0-20L)

2.Pair the UHF Wireless MIC Manually:
(This operation only suits for no sound from the MIC)
Step 1: Switch on the speaker, short press "Mode/Loop" key to switch to UHF mode, then long press "Mode/Loop" key 3 seconds to enter into UHF wireless pairing status with voice prompt "UHF is waiting for connection".
Step 2: Switch on the UHF wireless MIC, short press "+" or "-" to change frequency point from 700MHz-740MHz. Quick press the " ⏻ " 3 times and then current frequency stop flashing means pairing is successful. Please manually pairing the second microphone in the same way. Then it's possible to amplify voice with two wireless MIC.
Note: When pairing the second microphone, please stagger the frequency point of the first microphone to avoid interference with each other.

3.Battery Indication of UHF Wireless MIC:
In working status, it has sufficient battery power with "▮" indication showed on the screen; it's low battery when screen shows "□" indication, pls replace AA battery "2 timely.
Note: Please twist-off the battery cover and put the batteries properly. (Please mind the positive & negative anode)

Remote function:
1.Normally, the remote control should be in front of the receiving window and within the scope of 6M & 30°.
2.Please point the remote control toward the receiving window and avoid the obstacle.
3.Please avoid the strong light.
4.Please don't use old & new battery at the same time.
Note: Please refer to the real product.

Trouble Shooting:

1.Switch on the speaker but no sound.
1.1.No audio input: Please use another better audio files;
1.2.Haven't turned on the volume: Please adjust the volume properly;
1.3.No power of speaker:Charge the speaker to see whether screen has been lightened.

2.With sound distortion.
2.1.The volume is too high: Please turn down the volume properly;
2.2.The speaker is broken: Please contact us for maintenance.

3.No sound with MP3 playing.
3.1.The audios' format in USB flash drive or TF card is wrong: Please turn the format to MP3;
3.2.Chaotic procedure with wrong operation: Please restart the speaker;
3.3.Haven't inserted the USB flash drive / TF card properly: Please insert the USB / TF card properly.

4.Can only work several minutes after charged.
4.1.The battery is broken: Please change a new same battery;
4.2.The connecting cable of battery is loosened or disconnected: Please contact us for maintenance;
4.3.Hasn't full charged the speaker: Please full charge it before using.

SHIDU Guarantee:
100% SHIDU Guaranteed Product Satisfaction,
We promise 1 year warranty.
If you have any questions, please feel free to contact us, we will try our best to provide you the best service.
www.10shidu.com Email: info@10shidu.com