注意:
本手册描述的产品及其附件的某些特征和功能，仅供参考。
十度数码科技保留随时修改本手册中任何信息的权利，无需进行任何提前通知且不承担任何责任。

无担保声明:
本手册中的内容，除非适用法律要求，十度数码科技对本手册中的所有内容不提供任何明示或暗示的保证。
在法律允许的范围内，十度数码科技在任何情况下，都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、继发性的损害进行赔偿，也不对任何利润、数据、商誉或可预期的损失进行赔偿。

进出口管制:
若需将此产品手册中描述的产品出口、再出口、或者进口，您应遵守适用的进出口管制法律法规。

深圳市十度数码科技有限公司 地址:深圳市宝安区新和街11工业园2区A4栋十度科技园
Shenzhen SHIDU Digital Co. Ltd 电话0755-21635866 传真27156-29105099
客服热线: 4008 939 488
官方网址 WWW.10SHIDU.COM

本说明书所示产品图片及文字功能仅供参考使用，如出现印刷错漏，本公司不承担责任。
产品图片及说明因修改更新以致发生差。
SHIDU十度商标及LOGO均已注册，受知识产权保护，未经书面公司允许不得使用，违者必究。
本公司保留对产品更改及更新权利，届时恕不另行通知，恕无承担责任。最终解释权归深圳市十度数码科技有限公司所有。

Welcome to use SHIDU digital speaker. H1 Plus is a multifunctional portable speaker with Bluetooth and voice amplifier functions, also can play music through TF card and USB flash driver, Please enjoy it after reading the user manual.

Main features:

1.30W output, 5.25 inch full range speaker;
2.Support Bluetooth 5.0;
3.Rechargeable 3.7V 4400mAh A-grade lithium battery;
4.Support audio input and audio output;
5.Support ECHO effect, FM radio;
6.Support TF card, USB flash drive playback;
7.UHF wireless microphone.

Technical Parameters:

Rated power:	30W	Frequency response:	100Hz-18KHz
Impedance:	4Ω	Distortion:	≤5%
S/N ratio:	≥80dB	Recharging voltage:	DC 5V 2A

Structure Instruction:

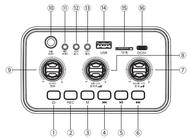

1.Power on/off: Long press it for 3 seconds, the display screen light up means power on, Long press it again for 3 seconds, the display screen light out means power off.
2.Recording
3.Mode selection:
A.Short press "M" to select Bluetooth mode / USB flash drive mode / TF card mode / FM mode / UHF mode.
B.In music play mode, long press "M" for 3 seconds to switch to single song repeat. The screen will display "ONE", long press "M" key again to switch back to all repeat and the screen will display "ALL",

4.Previous: Short press to select previous audio file.
5.Play/Pause:
a.In audio playing mode, short press it to pause; short press it again to play;
b.In any mode, double press the " ⏮ " button to close the voice prompt of the speaker, and double press " ⏭ " the button again to turn on the voice prompt of the speaker.
6.Next: Short press to select next audio file.
7.Music volume: Rotate the knob clockwise to "+" to continuously increase the music volume; rotate the knob to "-" to decrease the music volume.
8.MIC volume: Rotate the knob clockwise to "+" to continuously increase the MIC volume; rotate the knob to "-" to decrease the MIC volume.
9.ECHO
10.MIC 1 input
11.MIC 2 input
12.Audio input
13.Audio output
14.USB port: Support USB flash drive play, with a voice prompt "USB flash driver playing", Maximum support 32GB USB flash drive.
15.TF card slot: Support TF card play, with a voice prompt "TF card playing", Maximum support 32GB TF card.
16.DC 5V: Please use the DC 5V 2A power adapter to charge the speaker.

Playing from TF card/USB flash drive:

The speaker will automatically play the music file after insert TF card/USB flash drive, and the previous song and the next song can be selected by short press the " ⏮ " " ⏭ " button.

Recording Function:

To record:
1.Connected the wireless or wired microphone, then insert the storage (USB flash drive or TF card).
2.Long press "REC" key to start recording, the display will indicate the time. Short press "REC" key again to stop recording, it would save the audio file and play the recording.

To play a recording:
Insert a USB flash drive or TF card with recording files. Short press "REC" key to play back recordings. It will play the last recording by default. Short press " ⏮ " or " ⏭ " to select the previous and next recordings.

FM Function:

Switch on the speaker, short press "M" to choose the FM mode with the screen showing radio frequency. Long press " M " to enter into automatic channels searching, after searched successfully, the device will save the channel automatically. Please press " ⏮ " or " ⏭ " to choose the saved channels.

Bluetooth Function:

Please pair with your Bluetooth device as follows:
Step 1: Turn on the amplifier and short press "M" key to switch to Bluetooth mode. A voice will prompt "Bluetooth is waiting for connection". The screen will display " bLUE " and keep flashing.
Step 2: From your mobile setting,turn on the Bluetooth function. Then search for "H1 PLUS" and connect. Bluetooth pairing is completed with a voice prompt "Bluetooth is connected". And the " bLUE " display will be stop flashing.
When playing music, please keep the amplifier close to the Bluetooth-enable device to maintain a stable connection.

Charging the device:

A.When working, the battery icon on the screen flash continuously, indicating that the battery is low, please charge it in time. Please use the standard adapter to charge. Please unplug the adapter timely after fully charged, the charging time is normally 5~6 hours.
B.In order to achieve the best effect when using the speaker for the first time, it is recommended to be fully charged before use.
C.Please use the standard 5V 2A charger to charge the device.

Wireless Microphone Operation:



1.Switch ON / OFF:
Long press " ⏻ " on the wireless microphone to switch on.The screen display will show a default frequency point.
Long press " ⏻ " on power on state will turn off the microphone and screen goes out.
Notes: It will enter into screen protection mode after 10 seconds, Short press " ⏻ " button, the screen will blinking.

2.Pair the UHF Wireless MIC Manually (This operation is used when the MIC is no sound)
a.Switch on the speaker, select UHF mode, long press "M" to enter into UHF wireless pairing status with "UHF" flashing on the screen,
b.Switch on the UHF wireless MIC by long press " ⏻ ", The screen will display current frequency point, Quick press " ⏻ " button 3 times, the current frequency point will flashing, it means wireless MIC have paired with speaker successfully.

3.Battery Indication of UHF Wireless MIC:
In working status, it has sufficient battery power with " ⎓ " indication showed on screen; it's low battery with " ⎓ " indication showed on screen and please change the battery timely.

Note: Please open the battery cover properly and put on the batteries, (Please note the positive & negative anode.)

Remote function:(Not included)

1.Normally, the remote control should be in front of the receiving window and within the scope of 6M & 30°.
2.Please point the remote control toward the receiving window and avoid the obstacle.
3.Please avoid the strong light.
4.Please don't use old & new battery at the same time.
Note: Please refer to the real product.

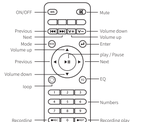

Trouble Shooting:

1.Switch on the speaker but no sound
1.1.No audio input: Please use another better audio files;
1.2.Haven't turned on the volume: Please adjust the volume properly;
1.3.No power of speaker:Charge the speaker to see whether screen has been lightened.
2.With sound distortion
2.1.The volume is too high: Please turn down the volume properly;
2.2.The speaker is broken: Please contact us for maintenance.
3.No sound with MP3 playing
3.1.The audios' format in USB flash drive or TF card is wrong: Please turn the format to MP3;
3.2.Chaotic procedure with wrong operation: Please restart the speaker;
3.3.Haven't inserted the USB flash drive / TF card properly: Please insert the USB / TF card properly.
4.Can only work several minutes after charged
4.1.The battery is broken: Please change a new same battery;
4.2.The connecting cable of battery is loosened or disconnected: Please contact us for maintenance;
4.3.Hasn't full charged the speaker: Please full charge it before using.

SHIDU Guarantee:
100% SHIDU Guaranteed Product Satisfaction,
We promise 1 year warranty,
If you have any questions, please feel free to contact us, we will try our best to provide you the best service,
www.10shidu.com Email:service@10shidu.com

十度音响

原声手提音响
使用说明书
USER MANUAL

关注十度微信公众号
回复型号"H1Plus"
获取设备使用教程

安全警告:
1. 请勿将产品及配件置近火源或任何过热的环境中。
2. 请勿将产品及配件接触之湿气，不要在靠近水的地方使用本设备，也不要将产品浸入任何液体中，避免产品及配件受到水渗或水溅。
3. 请勿自行打开或任意拆解、维修电池组件，如果电池更换不当会有爆炸危险，严禁将电池投入水、火中或靠近任何过热的环境中。
4. 本产品由外接电源适配器（5V 2A 电源）充电后使用，充完电后可方便的通过拔掉电源适配器插头断开电网电源。
5. 当用户暂不使用本产品时，请将产品电源开关放转至关闭状态关闭电源（参见产品操控示意图），避免电池电量的漏失。
6. 当禁止使用无线设备或设备的使用会引起电子设备的干扰与安全隐患时，请关闭本产品。
7. 在易燃易爆区域，请关闭本产品，并遵守相关标示说明，以免引起爆炸或火灾。易燃易爆区域包括但不限于：加油站、易燃或化工制品运输及储存设施、有爆炸危险标志的区域、有"关掉双向无线电设备"标志的区域。
8. 佩坐飞机时，请遵守航空公司有关规定和条例，在飞机起飞前关闭本产品，以免造成安全隐患。
9. 若使用电源适配器供电，应购买配套使用获得CCC认证并满足要求的电源适配器。

主要功能特点:
1、30W功率，配置5.25寸全频喇叭；
2、蓝牙5.0，音乐在线播放功能；
3、3.7V 4400mAh A级动力电池，电池保用三年；
4、独立音频输入、输出功能；
5、支持混响调节，FM收音功能；
6、支持TF卡、U盘播放功能；
7、UHF无线K歌功能。

数据参数:

输出功率:	30W	频率响应:	100Hz-18KHz
喇叭阻抗:	4Ω	失 真 度:	≤5%
信 噪 比:	≥80dB	输入规格:	DC 5V⎓2A

面板功能说明:

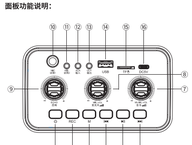

1.电源开关: 长按"⏻"键约开机语音报出后，显示屏幕常亮表示正常开机，再次长按3秒显示屏幕熄灭表示关机。
2.录音/播放按键
3.输入选择: 短按此按键可进行菜单选择，用来切换蓝牙模式、U盘播放、TF卡播放、收音模式、UHF模式。
在音乐播放模式下长按"M"键显示屏显示"ONE"为单曲循环，再次长按"M"键显示屏显示"ALL"为全部循环。
4.上一曲按键
5.播放暂停按键
①在音乐模式下短按" ⏯ "键为暂停，再次短按为播放；
②在任何模式下双击" ⏯ "键复关闭主机语音提示音，再次双击" ⏯ "键是打开主机语音提示音。
6.下一曲按键
7.音乐音量: 可调节音乐播放声音大小。
8.麦克风音量: 可调节话筒音量大小，使话筒声音合适。
9.混响调节: 可调节话筒混响，使话筒效果更佳。
10.MIC麦克风接口1
11.MIC麦克风接口2
12.音频输入接口
13.音频输出接口
14.USB接口: (仅限数据传输读取U盘)
15.TF卡接口
16.DC 5V

TF卡/U盘功能说明:

按照主机标识的方向将TF卡/U盘正确插入主机TF卡/U盘槽后，主机将自动播放TF卡/U盘中的音乐文件，同时可通过操作上一曲、下一曲键或者数字选曲键选择自己喜欢的曲目。

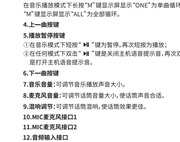

录音功能说明:

1.连接话筒，在任意模式下插入外接存储器（U盘或是TF卡），长按"REC"键屏幕闪烁开始录音标示开始录音；在录音模式下，短按"REC"键保存并开始播放录音。
2.在音乐模式下，如果外接存储器里有音文件，短按"REC"键进入播放录音状态，默认播放顺序为最后一个录制音频为当前录音播放，在此状态可以通过上一曲"⏮"键或下一曲"⏭"键来选择录音播放文件。

注意:
a.在工作时，屏幕电量指示图标不停的闪烁，表示电力不足，请及时充电；本机充电时间约5-6小时充满；
b.第一次使用主机时，电池有小部份电量，但是为了达到最好的效果，建议先充满电再使用。

无线蓝牙操作说明:

第一步:先将主机开机，按"M"键切换至蓝牙模式，主机会提示"蓝牙已准备好，正在等待配对"，同时显示屏上蓝牙字样"bLUE"在不停闪烁；
第二步:打开手机，进入手机的"设置"菜单，找到蓝牙功能选项，打开手机的蓝牙功能，点"扫描"按钮，待搜索到"H1PLUS"点击"H1PLUS"连接即可；同时主机会提示配对成功。
第三步:连接成功后，即可通过主机播放手机数字教材、培训资料、歌曲播放等。

为主机充电:

当主机低电时，将随机标配的USB充电线连接主机DC 5V插口，另一端连接5V电源适配器将提供电源(220V)插座充电，充电时电量指示图标的电量格闪烁且逐个增加，充满电后，电池图标长亮。

注意:
a.在工作时，屏幕电量指示图标不停的闪烁，表示电力不足，请及时充电；本机充电时间约5-6小时充满；
b.第一次使用主机时，电池有小部份电量，但是为了达到最好的效果，建议先充满电再使用。

无线话筒功能说明:

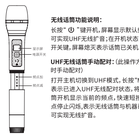

无线话筒功能说明:
长按" ⏻ "键开机，屏幕显示默认频点值，打开主机即可实现UHF无线扩音；在开机状态下，长按" ⏻ "电源开关键，屏幕熄灭表示话筒已关机。

UHF无线话筒配对说明:（此操作方法适用于话筒无声时手动配对）
打开主机切换到UHF模式，长按"M"键3秒，UHF闪烁表示已进入UHF无线配对状态，将手持式UHF无线话筒开机显示当前的频点，快速按照开机键3次当前频点停止闪烁，表示无线话筒与机器已手动配对成功，即可实现无线扩音。

UHF无线话筒电量说明:
在使用过程中，手持式UHF无线麦克风显示屏电量提示符为" ⎓ "满格时，表示电量充足；当显示电量提示符为" ⎓ "空格时，表示电池低电，请及时更换电池。
注:正确开机电池盒装入电池,注意电池的正负极不要装反。

遥控功能说明:(标配不含遥控器，需另外选购)
1.在正常情况下，遥控器应该在接收窗前的长米，30度范围内使用；
2.操作遥控器时，将遥控器对准机器的遥控窗口，遥控器与机器之间不应有障碍物；
3.如果遥控接收器处于直接接收强光照射的位置遥控器可能失效，在此情况下，请将机器移开，以避免直接照射；
4.避免新旧电池混合使用，定期检查遥控器电池是否更换。

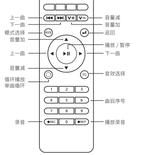

故障自我检查:

用户在使用本机过程中，如发现有问题，请按下面的故障检修表逐一检查，仍然不能解决问题，请找本公司在当地的经销服务商或银行本公司的客服热线咨询，故障检修表具体详见下表所示：

故障现象	可能原因	处置方法
开机有噪音，但无声音	1. 音量开小 2. 音频线接触不良	1. 调大音量 2. 检查音频线连接
声音失真	1. 音量开过大 2. 音频线接触不良	1. 调小音量 2. 检查音频线连接
无线MIC无声	1. 话筒电池电量不足 2. 话筒未开机 3. 话筒与主机配对失效 4. UHF无线话筒频率与主机频率不匹配	1. 更换话筒电池 2. 开启话筒 3. 重新对话筒与主机配对 4. 重新对话筒与主机UHF频率匹配
MP3 无声	1. U盘或TF卡内无MP3文件 2. U盘或TF卡内文件格式不正确 3. U盘或TF卡内文件太多	1. 检查U盘或TF卡内文件 2. 检查文件格式 3. 删除部分文件
有线话筒 或无线话筒 有声音，但 主机无声	1. 音量调开 2. 有线话筒线短路 / 断 3. 无线话筒电池	1. 调小音量 2. 检查有线话筒线 3. 更换话筒电池
无线话筒 有声音，但 主机无声	1. 无线话筒与主机频率不匹配 2. 无线话筒与主机未配对	1. 调整话筒频率与主机频率匹配 2. 将话筒与主机配对

售后服务条例:

一、本公司提供的售后服务方式:
1.咨询服务:用户在使用产品前，请仔细阅读本产品的使用说明书,在使用过程中遇到问题,均可与当地经销商联系,或致电十度全国统一客服热线 **4008 939 488**。
2.包换服务:包换期内(自购机之日起7天内)，正常使用出现非人为故障,请保持产品、配件和包装的外观与完整(原外观损坏,作保修处理)。经检测确认故障后，可选择换货或维修,用户可到当地十度授权经销商联系处理。
3.保修服务:保修期内,正常使用出现了非人为故障,均可享受免费保修服务(主机一年内免费保修,若人为损坏,作收费维修处理)。
4.收费维修服务:产品在购机之日起一年到三年内,出现故障可收费维修,用户需要支付维修所需的元件费,运输费和全程的维修人工费。
5.以下情况不在三包范围内,本公司可提供有偿服务:

(1).超过三包期限；
(2). 意外因素或人为行为导致的产品损坏 (如:未按使用说明书操作,维护或保管,错误安装造成的故障,接入不合适的电源、进水、摔落、摔坏等)；
(3).无有效三包凭证；
(4).因不可抗力如地震,火灾,水灾,雷击等导致的产品故障或损失；
(5). 未经本公司许可,擅自拆卸,修理或改装；
(6).在运输、搬卸过程中造成故障,损伤。

二.关于售后服务的说明:
1.购机日期以未凭证为准,不能有效证明的,以生产日期为准；
2.质量问题不包括用户个人对音质、音色等主观异议,不作为退换货的条件；
3.配件,外壳,说明书,包装不在保修服务范围内；
4.对已停产型号产品的服务,本公司仅做功能性修复(外观可能与原产品有异)；
5.经销商向您做出的非本公司保证的其他承诺,本公司不承担任何责任；
6.用户在接受服务之前,请将重要资料另行备份或记录,因维修或其他任何原因造成的任何损失,本公司概不负责,因保管不善等原因将机内资料泄露给第三者所造成的损失(如:银行账号、密码、资料被更改等)，本公司也概不负责；
7.在免费保修期内,本公司或授权服务机构有更换原的故障的所有仪及处置权。
8.使用本产品前,请仔细阅读本产品的使用说明书,并妥善保存购机凭证,本三包凭证内容解释权归属深圳市十度数码科技有限公司所有,如有变动,恕不另行通知。

客服服务时间:每周一至周六9:00-18:00(法定节假日除外)
全国统一服务热线:4008 939 488 公司网址:www.10shidu.com

产品保修卡

购买产品时，请认真填写此卡，并予以妥善保存。

用户档案

用户姓名	
性别	
通讯地址	
邮编	
联系电话	
购买地点	
购买日期	
品名及规格	
销售单号	
机身编号	
经销商签名	
用户签名	

经销商盖章处